
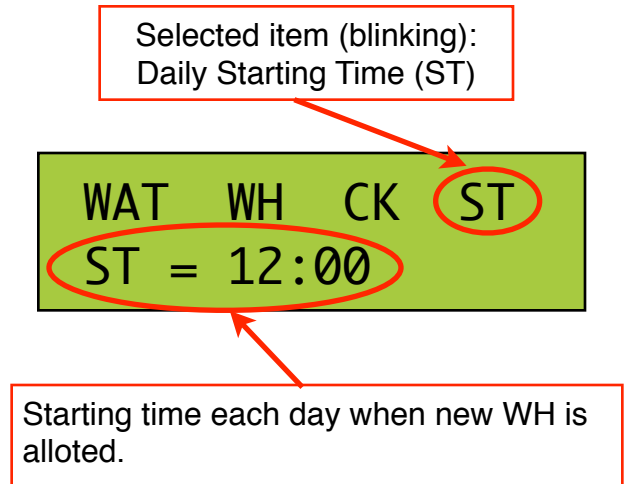
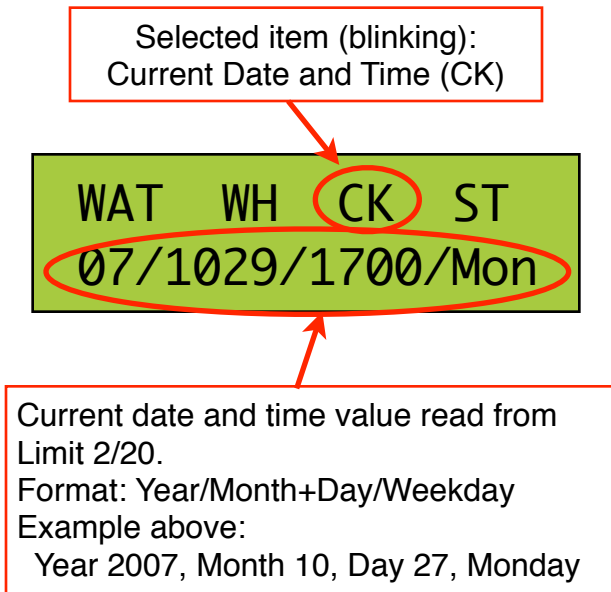
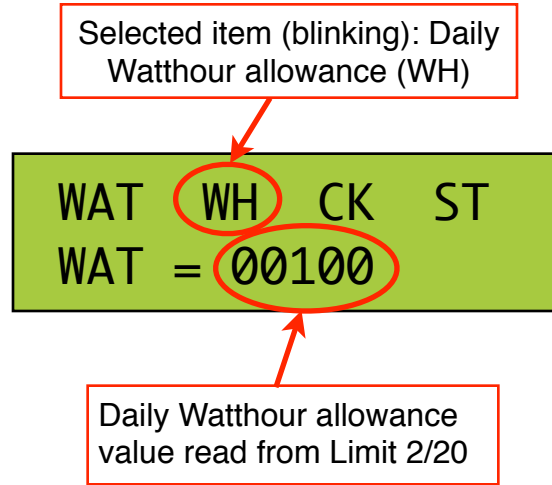



Limit 2/20 Operating Instruction:

1. When the Limit 2/20 is first powered on, it will display the kwh, it will go into its normal mode of operation once it has been set using the MST-08.

MST-08 Operating Instructions:

1. Connect the Limit 2/20 to the MST-08 using the phone cable and the MST-08 will automatically turn on and be ready to receive instructions. Shown below are the various parameters that can be set.

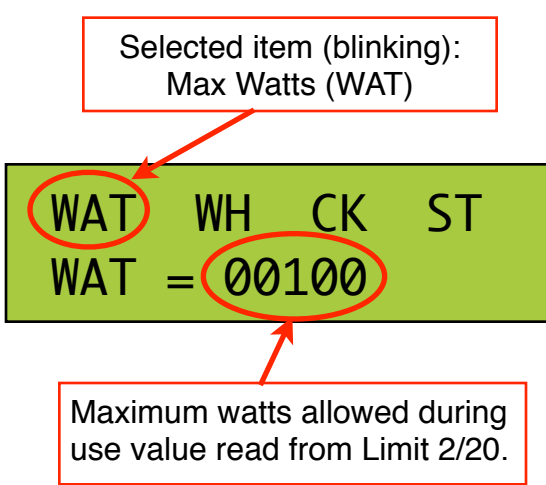

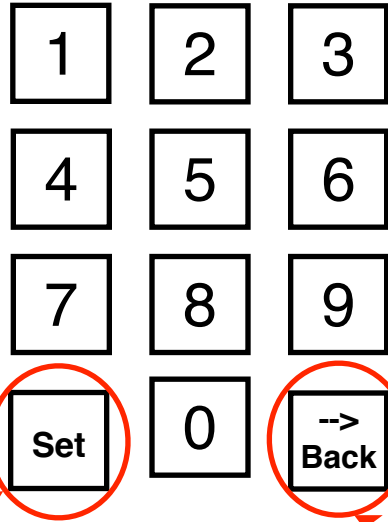


Short Press: Move left
Long Press: Set (Enter Setting Mode)

Short Press: Move right
Long Press: unused, no function

2. Press the <Set> key to enter setting mode for the selected parameter.

Setting Mode Key Assignments:

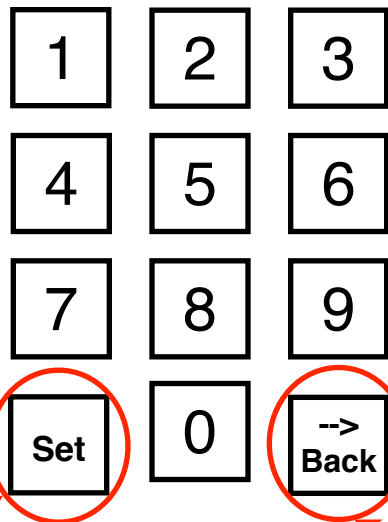

Short Press: Save and exit
Long Press: Save and exit

Short Press: Backspace
Long Press: unused, no function

3. While in setting mode, use the numeric keys to enter desired value, values allowed are from 0 to 65535, press <Set> again to save the desired value and exit.

When setting the CK, please set the year, month, day, hour, minute, and weekday in sequence. To enter the weekday, use the numeric keys, Mondays to Sundays is represented by 1 to 7 respectively.

When entering the ST, please set the hour and then the minute in sequence.

4. When entering the desired value, make sure that the maximum value is not exceeded, if the value entered is greater than the maximum value allowed, then the maximum value for that parameter is used.

WT: 0 to 65535

WH: 0 to 31680

CK-Year: 0 to 99 (year, A.D. 2000 to 2099)

CK-Mon: 1 to 12 (month, 0 is treated as 1)

CK-Date: 1 to 31 (day of the month, 0 is treated as 1)

CK-Hour: 0 to 23 (hour, 24 hour format)

CK-Min: 0 to 59 (minute)

CK-Day: 1 to 7 (day of the week, Monday to Sunday)

ST-H: 0 to 23 (hour, 24 hour format)

ST-M: 0 to 59 (minute)